


ACURITE®

SET & FORGET.® 

INSTRUCTIONS

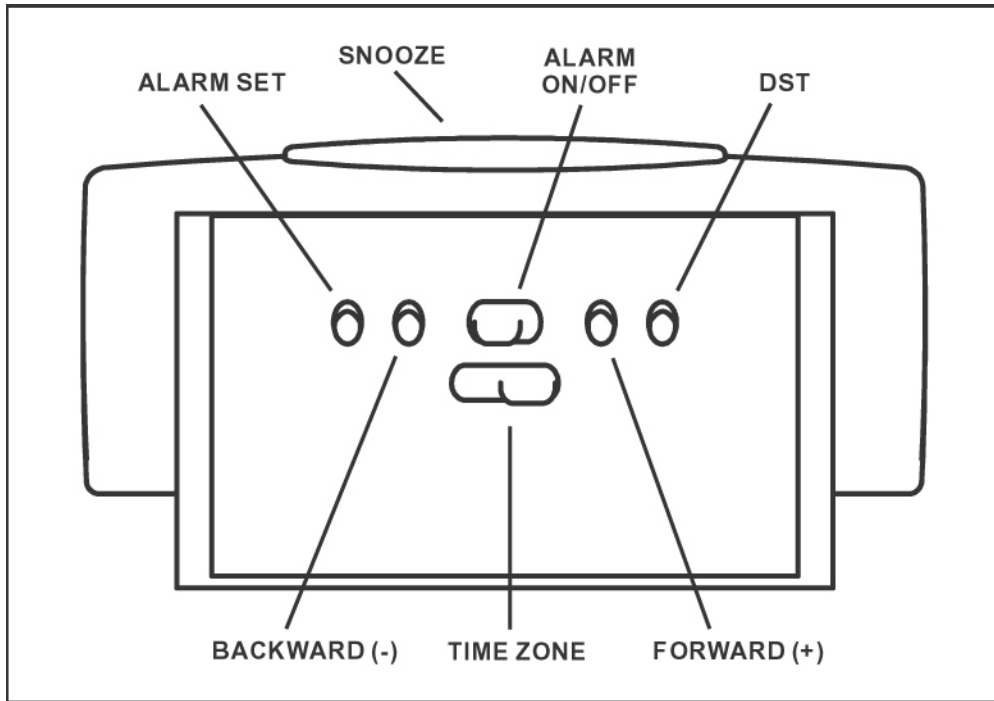

Features

Congratulations on your purchase of an Acu-Rite Set and Forget alarm clock, the first alarm clock to automatically display the time as soon as it is plugged in. The clock will show the correct time in the Eastern Time Zone (default). Simply slide the switch to your time zone and the time will adjust to your correct local time.

To Set DST (Daylight Savings Time)

To set the DST (On/Off), press the DST button once, and then press the (+) or (-) button to turn the DST function on or off, if the display shows (doN) it means DST is on and (doF) means DST is off. After turning on the DST function the first time, DST will be updated automatically. This allows people living in areas that do not observe DST to set their clock to the correct time quickly & easily.

DST starts: First Sunday in April at 2am.

DST ends: Last Sunday in October at 2am.

To Set Time Zone

Slide the TIME ZONE switch located on the back of the clock to your local time zone.

To view the time zone status on the display press the DST button twice and a time zone code number will be shown at the right side of the display. Code number key:

- 1 = East Standard Time (EST)
- 2 = Central Standard Time (CST)
- 3 = Mountain Standard Time (MST)
- 4 = Pacific Standard Time (PST)

To Set the Alarm

To set the alarm time, press the ALARM SET button once. The hour digits will begin to flash. Press the (+) or (-) button until the correct hour is displayed. Press the ALARM SET button once again to set the minutes. The minutes digits will begin to flash. Press the (+) or (-) button as above. Be sure to set the AM/PM time properly or the alarm will sound at the wrong time.

Snooze

Press the SNOOZE bar and get an extra 10 minutes of sleep. This may be repeated up to four times.

To Operate Alarm

Slide the ALARM ON/OFF switch located on the back of the clock to the ON position., the alarm will sound at the time it is set for. To reset the alarm for the next day, momentarily press the ALARM SET button. To shut off the alarm completely, slide the ALARM ON/OFF switch to the OFF position.

To Manually Reset the Time

Some people prefer to set their clock ahead of the correct time. The following will allow you to do so, if you wish. Should the clock ever lose the correct time, the same procedure can be followed to set it correctly.

To set the time, press and hold the DST button for 5 seconds. The hour digits will begin to flash. Press the (+) or (-) button to set the hour. Press the DST button again. The minutes digits will begin to flash. Press the (+) or (-) button to set the minute. Continue these steps to set the date and year also.

Backup Battery Replacement



This clock has 4 AG13/LR44 backup batteries installed at the factory. We suggest that you replace the backup batteries at least every five years. This will allow the correct time to be kept forever. When the unit is not plugged in, the backup battery will keep the correct time for 11/2 years without the display showing.

To Read the Date and Year

Press the (+) or (-) button to display time, date, and year alternately. Press the (+) or (-) button once to show Month & Date, press the (+) or (-) button twice to show Year, for example, the display reading (y03) means the year is 2003.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.		



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

AVERTISSEMENT

Pour réduire les risques d'incendie et d'électrocution, ne laissez pas l'appareil sous la pluie ou dans l'humidité.

	ATTENTION Risque d'électrocution ne pas ouvrir	
ATTENTION: POUR PREVENIR LES CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT, OU UNE AUTRE SORTIE DE COURANT SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT		



Ce symbole sert à aviser l'utilisateur qu'il y a une « tension électrique dangereuse » dans le boîtier du produit, laquelle peut atteindre une amplitude suffisante pour constituer un risque d'électrocution.



Ce symbole sert à aviser l'utilisateur qu'il y a des instructions d'utilisation et d'entretien importantes dans la documentation accompagnant l'appareil.

LIMITED WARRANTY INTERNATIONAL

Consumer may have more remedies at law than follows. Chaney Instrument Company warrants to the owner, this product to be free from defect in material and workmanship for one year from date of purchase.

CHANNEY INSTRUMENT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER ARISING IN CONTRACT OR TORT.

Chaney Instrument's obligation (at its option) is limited to repair or replace this product. For in-warranty repair, send clock, accompanied by Guarantee, bearing Dealer's name and date of purchase, with \$ 5.00 to cover handling and postage, to:

Chaney Instrument Company
965 Wells Street
Lake Geneva, Wisconsin 53147