

101033

INSTRUCTION OF YL-930 LCD TALKING CLOCK

Press the top button of the clock, time will be announced

Press "Set" button to change the mode status circularly as following:

Normal time display mode alarm off → Normal time display mode alarm on → Time set mode → Alarm time set mode

SET TIME

In the time set mode, press "HR" and "MIN" button to adjust the hour and minute respectively until the correct time is displayed.

SET ALARM TIME

In the alarm time set mode, press "HR" and "MIN" button to adjust the alarm time. In time display mode, press "HR" button to choose between 3 alarm sound in cycle:

"BEEP"--> "CUCKOO"--> "CROWCOCK"

SNOOZE FUNCTION

When the alarm is on, it lasts one minute. To stop midway, press "HR" or "MIN" button. If the top button of the clock is pressed while alarm, time will be announced once and alarm will stop and then start again in 10 minutes.

HOURLY REPORT

In the normal time mode, press "MIN" button to select chime function on or off.

Press "RESET" button to restart the clock.